



Rat blockers are simply designed to be a one way valve stopping vermin travelling up drainpipes. This simple, robust, stainless steel system is fitted in the drain outlet, with it's one-way flap allowing all waste and vermin to pass out but stopping any vermin entering back up the pipes.

1

Once the manhole cover, is removed, ensure your mounting pole is extended to the necessary length, before attaching the rat blocker and lowering into the manhole.

N.B. Check the flaps are the correct orientation before installing the unit, if incorrect it will result in a blockage.

2


Slot your rat blocker into the desired position, by pushing it forward until the stopper of the blocker is touching the sides of the chamber.

3

Turn the installation pole clockwise until you can feel the blocker is tight fitted.

4

Remove the installation pole and test the installation by flushing the toilet with toilet paper and ensuring this flows out correctly.

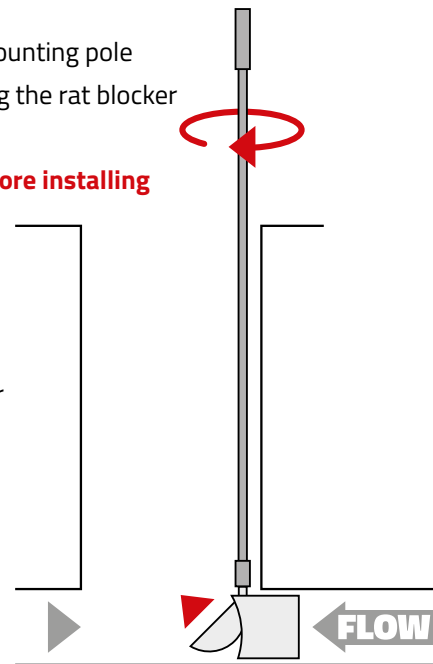

The Rat Blocker can easily and simply be removed for cleaning and maintenance purposes, but ensure the installation instructions are followed when re-installing the unit.

